

Xtreme Power Systems

XtremeLink™

Quickstart Guide

Full documentation available on our website:
<http://www.xtremepowersystems.net/manuals.php>

Installation Requirements

Transmitter – Remove the stock RF module from your radio by squeezing the tabs and pulling the module out of the transmitter chassis. Insert the XtremeLink™ RF module in place. Remove the stock metal antenna as it is not used with this product. Screw the included antenna onto the gold connector. **Finger tighten only!**

Receiver – The receiver can be mounted in any orientation that you like, but you MUST locate the antenna portion of the receiver no less than 2 inches (50mm) from any metallic object. This includes metal, carbon fiber, wiring, servos, fuel pumps, batteries, etc. Try to mount the receiver up and away from any large metal. A canopy is a great place to mount the receiver.

Binding the XtremeLink™ System

Transmitter – The transmitter modulation **must** be set to PPM, MPX, PPM18, or PPM24 prior to using this product. Switch to one of these modes before any use. Press and hold the PROG button the XtremeLink™ RF module while powering on the transmitter. Hold the button until the STATUS LED changes from off to green and then release the PROG button. The STATUS LED will begin flashing orange. This indicates that the transmitter is waiting for an XtremeLink™ receiver to bind to.

Receiver – Power on your XtremeLink™ receiver. After three seconds the STATUS LED will begin flashing red. Press and hold the programming button (located inside of the receiver, next to the antenna) using a 3/32nd or equivalent blunt object (note: screwdriver tips will damage the receiver) until the STATUS LED changes from off to green, and release the button. Once the button is released, the units should bind. Both STATUS LEDs will turn green when a successful bind has occurred. If either STATUS LED does not turn green, repeat this procedure.

Power off your transmitter and receiver after binding. Your XtremeLink™ system is now ready for installation. **You must thoroughly read the installation and usage manual prior to use!**